

9.7.11 Greasing points



⚠ DANGER

IT IS MANDATORY TO INSTALL THE ARM SAFETY BLOCK WHEN PERFORMING MAINTENANCE WITH THE ARM RAISED.

The **FIG. 50** and **FIG. 51** show the location of greasing points.

The lubrication points for the boom cylinders are located under the front machine cover (**FIG. 50 - Ref. 1**). To remove the cover loosen the screws that fix it.

Clean the greasing points with a cloth and apply grease type **0088 PAKELO BEARING EP GREASE NLG I 0**.

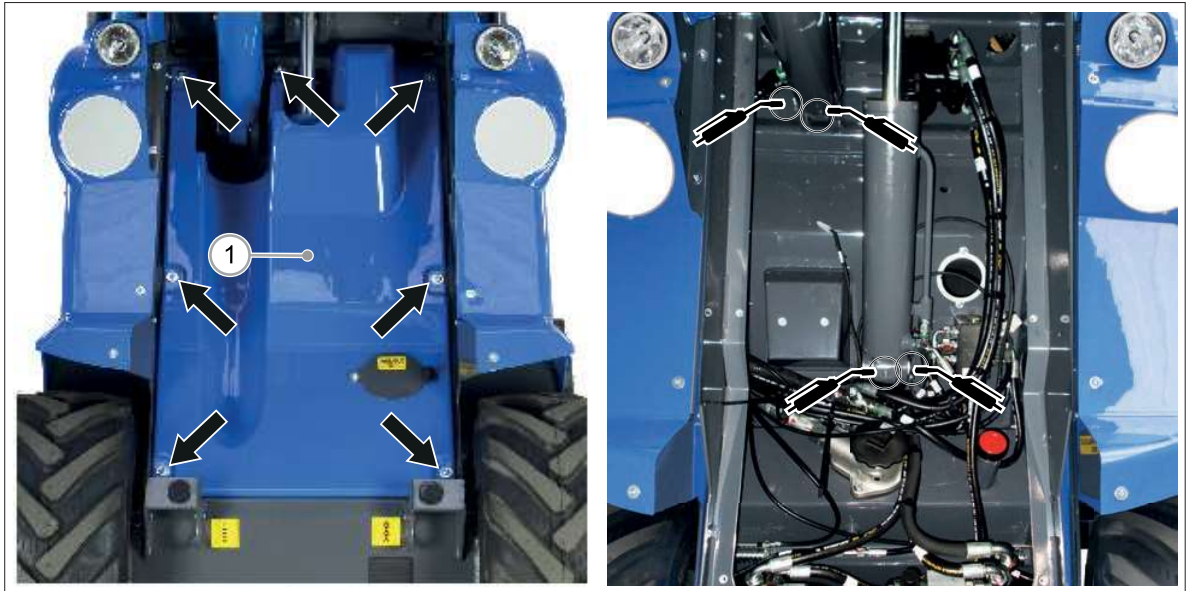


FIG. 50



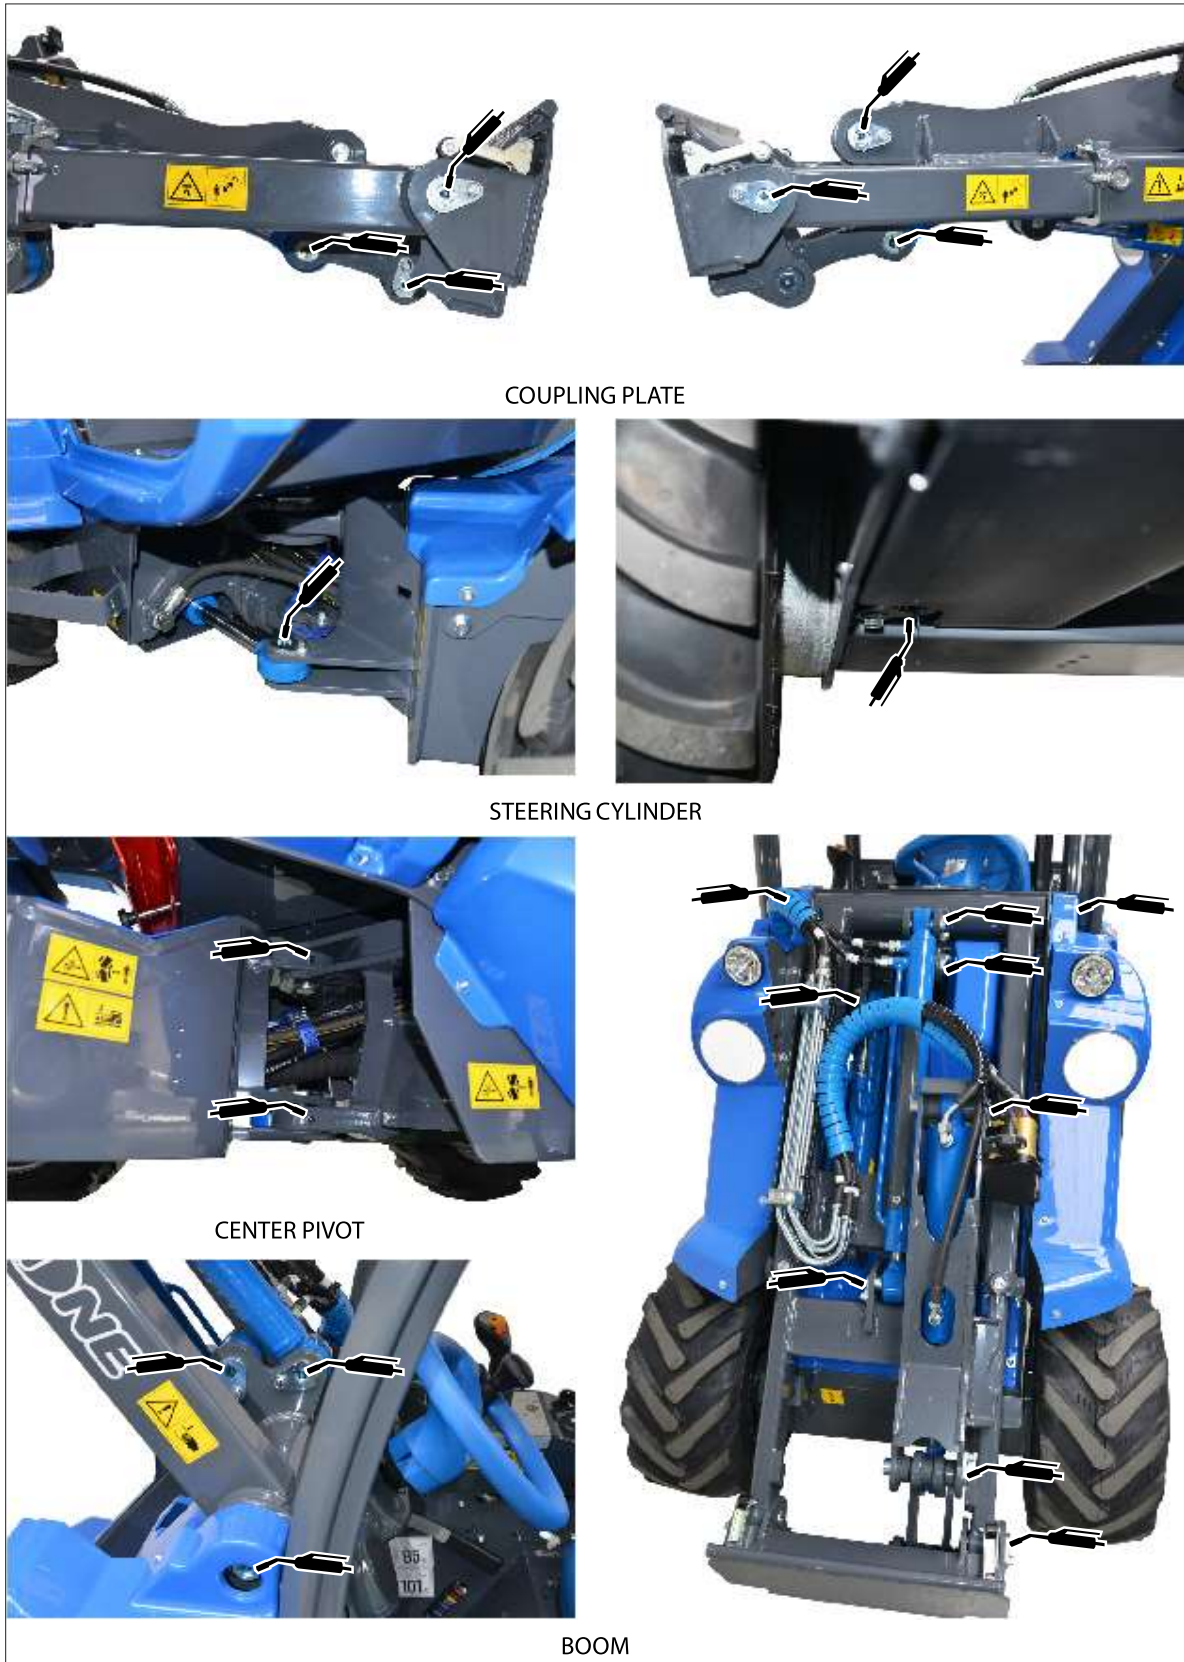


FIG. 51