
Lubrication plan

Lubricate the specified lubrication points once a day. Before starting maintenance, lower the red maintenance prop when the skip is raised and secure the skip with it.

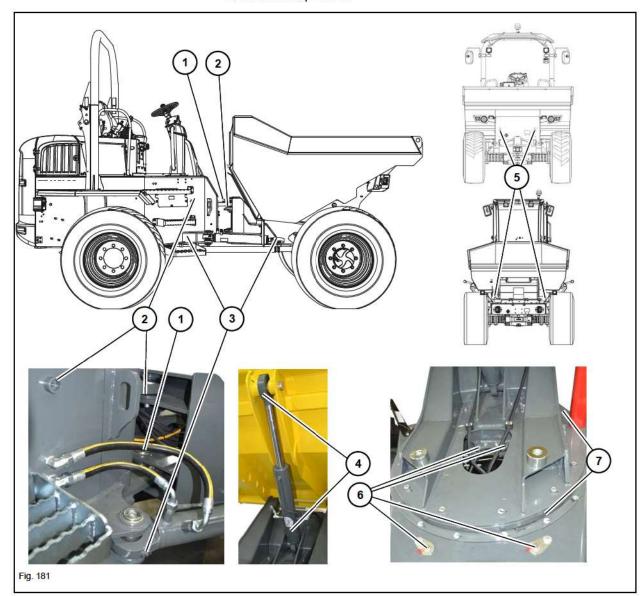

| Position | Lubrication point ¹ | Quantity |
|----------|---|----------|
| 1 | Articulated joint on left and right | 2 |
| 2 | Articulated joint (left side of joint, right side of machine) | 2 |
| 3 | Front and rear of steering cylinder | 2 |
| 4 | Top and bottom of steering cylinder | 2 |
| 5 | At front of skip | 2 |
| 6 | Swiveling cylinder ² | 4 |
| 7 | Live ring ² | 4 |

Lubrication on the pins or directly on the cylinders Option for swivel skip

7-9 BA D18 en* 1.2 * D18_12_700.fm