

Preparing lubrication

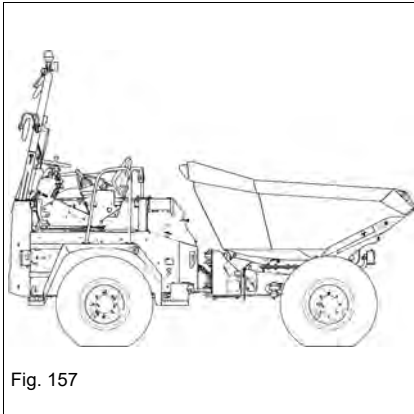


Fig. 157

1. Stop the vehicle on firm, level, and horizontal ground.
2. Lower the skip. Check the middle position if the machine is equipped with a swivel skip.
3. Stop the engine.
4. Remove the starting key and carry it with you.
5. Safely store all loose objects.
6. Close the windows and doors (cab option).
7. Close and lock all covers.
8. Attach a warning label to the control elements (for example **“Machine being serviced, do not start”**).

Wait at least 10 minutes after stopping the engine.




Information

Keep all lubrication points clean and remove any escaping grease.



Lubrication plan

Lubricate the specified lubrication points once a day. Before starting maintenance, lower the red maintenance prop when the skip is raised and secure the skip with it.

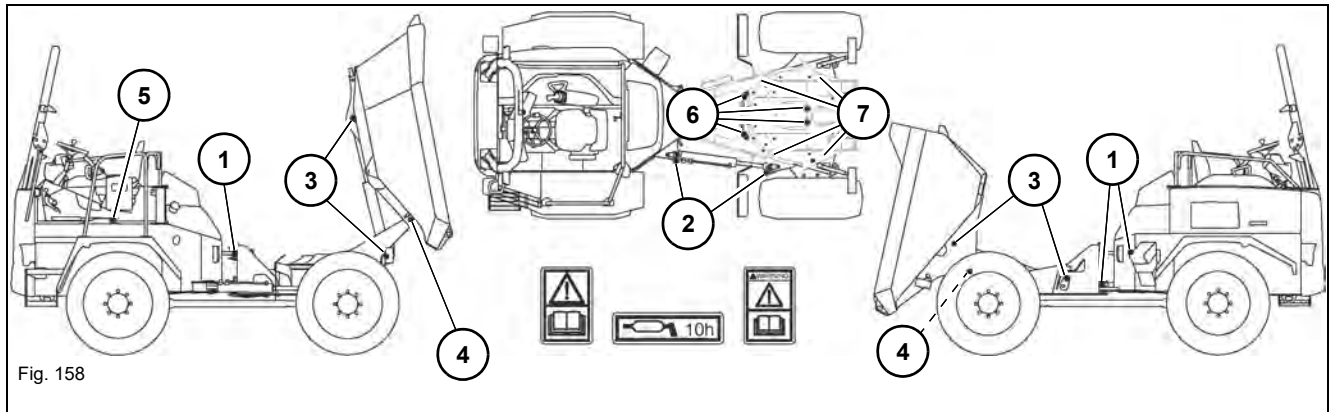

Position	Lubrication point	Quantity
1	Articulation	3
2	Steering cylinder	2
3	Tilt cylinder	2
4	Skip	2
5	Seat console	1
6	Swiveling cylinder ¹	4
7	Live ring ¹	4

1. Option for swivel skip