



Lubrication plan

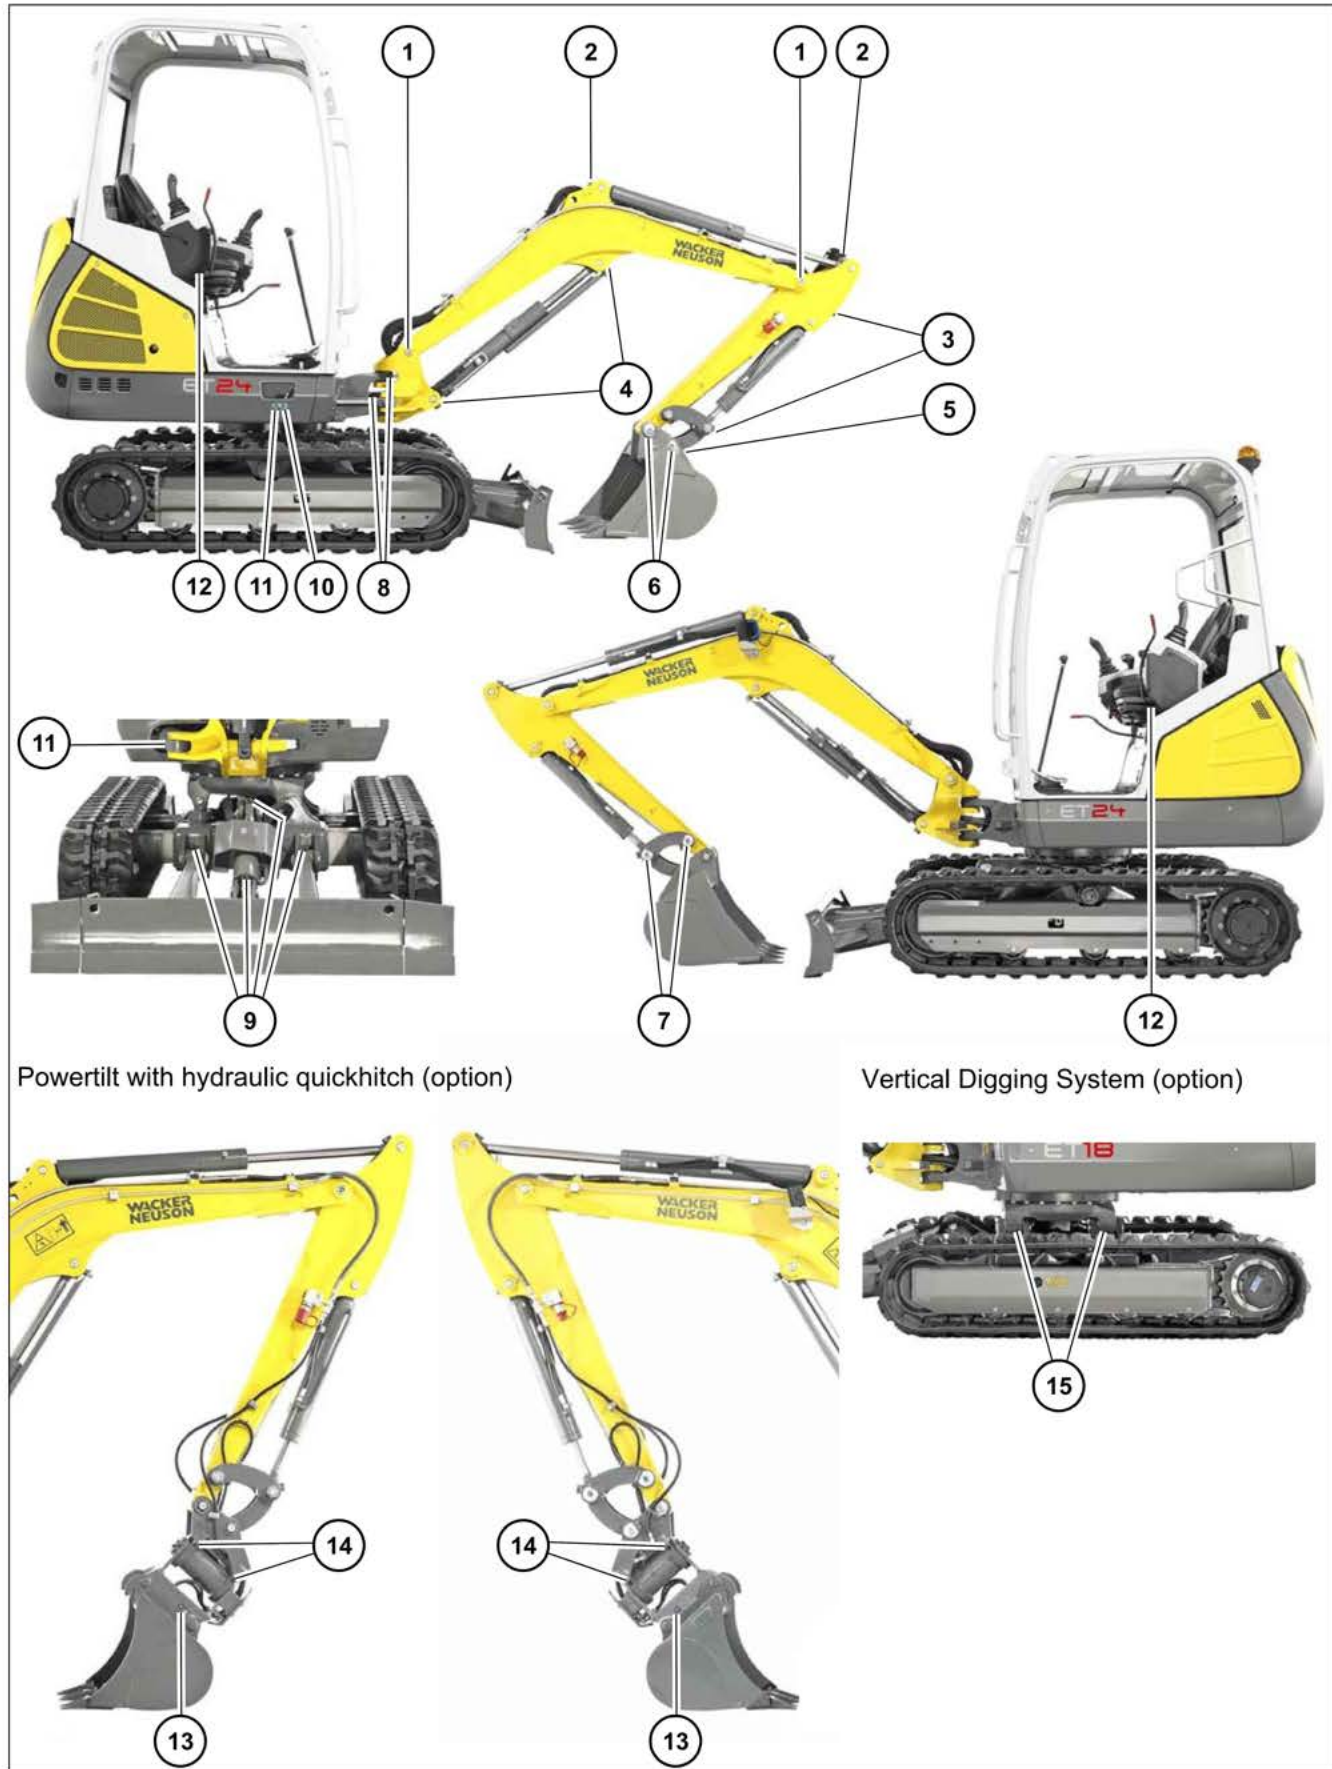

Powertilt with hydraulic quickhitch (option)

Vertical Digging System (option)

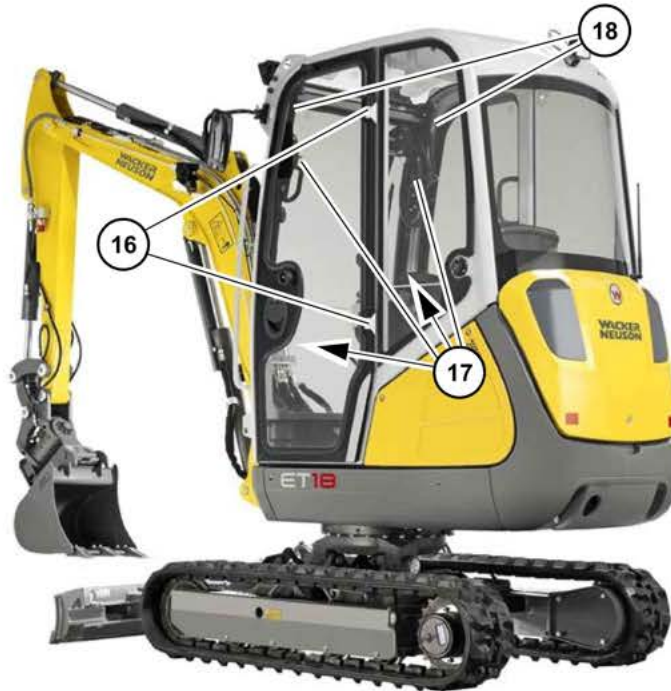

Position	Lubrication point	Interval	Quantity
1	Boom	Daily	2
2	Stick cylinder	Daily	2
3	Bucket cylinder	Daily	2
4	Boom cylinder	Daily	2
5	Joint rod	Daily	1
6	Bucket pin	Daily	2
7	Joint rod pin	Daily	2
8	Swiveling console	Daily	2
9	Stabilizer blade	Every week	4
10	Ball bearing race	Every week	1
11	Swiveling cylinder	Daily	2
12	Control lever base Control lever base (two-door cabin option)	Every week	3 (6)
13	Hydraulic quickhitch (option) Claw	Daily Every week	2 --
14	Powertilt (option)	Daily	4
15	Vertical Digging System (VDS) (option)	Every week	2
16	Door hinge (cabin option) Door hinge (two-door cabin option)	Every week	2 4
17	Pin, lock notch and lock (cabin option)	Every week	4
18	Front window rail (cabin option)	Every week	2

Green means: lubrication every 50 hours or once a week.

Blue means: lubrication every 10 hours or daily.